

SUNPRINCE QUARTZ HEATER

INSTALLATION NOTES

1. SUPPLY

Suitable for 240V single phase supply only.

Wiring must conform to latest edition of the IEE Wiring regulations. A double pole isolator switch should be included

Please note that an inrush current of several times the steady state current will flow for a few hundredths of a second after first switching on. PIR devices or other controllers may be used to control this unit provided all devices are rated to the appropriate electrical loading with due allowance for in-rush current.

Circuit breakers must also be selected to ensure compatibility with the in-rush current.

2. CONNECTION

This unit MUST be earthed and wired with heat resistant cable.

The circular cable access hole in the black plate must NEVER be blocked (eg with a cable gland or similar device).

3. WALL MOUNTING

Position wall bracket such that heater is a minimum of 200mm from ceiling and at least 2m above floor level.

NEVER locate near inflammable materials or loose materials such as curtains that may present a fire risk

Unit can be ceiling mounted but must be at an angle of at least 30 degrees to the horizontal.

CAUTION

Do not hold lamps with bare hands, as this will damage the quartz glass. Fingerprints should be removed with methylated spirits before switching on.

4. GUARANTEE

With the exclusion of lamps, this product is guaranteed against any fault caused by manufacture for two years from the date of purchase.