

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS FOR**Ceramic Radiant Heaters****Catalogue Numbers HSCEH7115N, HSCEH7230N & HSCEH7345N****PLEASE RETAIN THIS LEAFLET FOR FUTURE MAINTENANCE****1. CATALOGUE NUMBERS**


- HSCEH7115N Single Emitter unit 1.5 kW rating
HSCEH7230N Twin Emitter unit 3.0 kW rating
HSCEH7345N Triple Emitter unit 4.5 kW rating

2. GENERAL

Ceramic heaters are high intensity radiant appliances, using ceramic emitter elements as the energy source. The emitters radiate their energy primarily in the long-wave infrared waveband with high energy conversion efficiency and good heat penetrating properties.

The heaters are supplied complete with wall mounting brackets; the 3 and 4.5 kW heaters are also supplied with a 1m length of high temperature mains cable. Their robust construction makes them suitable for most types of industrial and commercial situations. An outline drawing of the units, together with their overall dimensions is shown in figure 1.

Figure 1 – Outline Dimensions of Ceramic Heaters

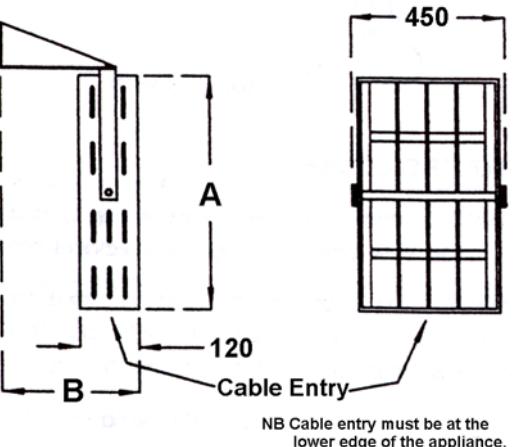

UNIT	DIMENSION	
	A	B
HSCEH7115N	230	310
HSCEH7230N	370	410
HSCEH7345N	496	410

3. SAFETY NOTES

- a) The heaters should not be operated in ambient temperatures greater than 30°C (86°F), otherwise the life of the heater emitter could be shortened.
- b) The heaters should not be operated in areas subject to continuously high humidity, or excessive dust. Corrosive atmospheres should also be avoided.
- c) These radiant heaters are capable of projecting a significant amount of radiant energy for a considerable distance in front of the reflector. Great care should be taken with their mounting, if there are flammable materials in the vicinity. These heaters must not be used in areas subject to flammable vapours such as paint solvents or petrol fumes.

4. INSTALLATION


The mounting position and spacing of these units will depend on the mounting height and reference should be made to the technical data to determine the optimum position. The minimum recommended mounting heights are as follows:

HSCEH7115N	(1.5 kW)	2.3 metres
HSCEH7230N	(3.0 kW)	2.7 metres
HSCEH7345N	(4.5 kW)	3.0 metres

For wall mounting, a bracket arrangement is supplied as standard and this is shown in figure 2. With the unit wall mounted, it is essential that the radiant energy is directed away from the wall. The minimum clearances from the ceiling or the adjacent walls are shown in figure 3. For maximum heating effect on the occupants of the room, the angle of the front face of the unit to the horizontal should be about 45°.


As well as an efficient conversion of electrical energy into radiant heat energy, the effectiveness of radiant heaters depends on efficient absorption of this energy by the people in the building. More efficient absorption is obtained if the radiant heat is directed from one or both sides of the person. In any situation, the optimum angle for the heaters will be with the plane of the reflectors at about 45° to the horizontal. Heating schemes should be designed such that the area to be heated is effectively covered by units which are mounted close to this angle.

Figure 2 – Wall Mounting of Ceramic Heaters

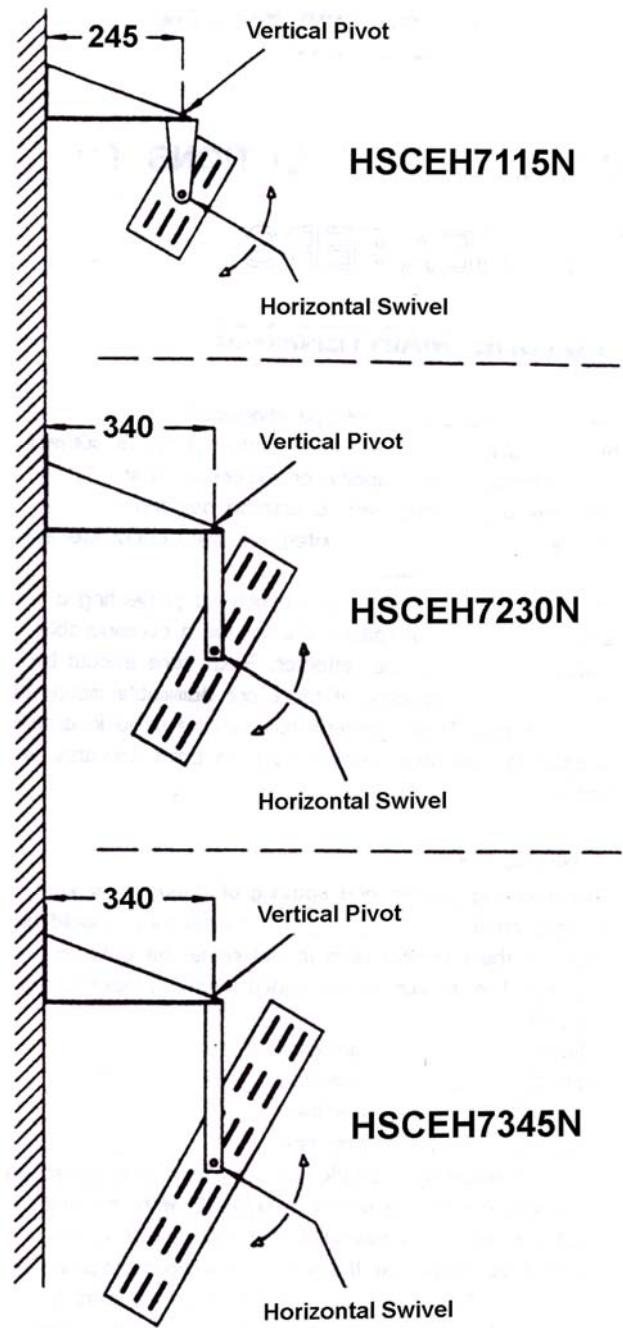

NOTE: IT IS NOT RECOMMENDED TO SWIVEL THE BODY MORE THAN 80° FROM THE VERTICAL

Figure 3 – Minimum Clearances to Adjacent Wall and Ceilings

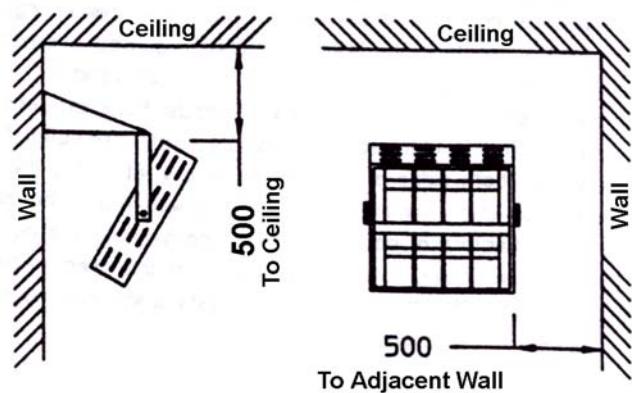


5. ASSEMBLY

Unpack the heater, remove all outer packaging. Although the appliance's construction is robust, care should be taken when assembling the yoke and when securing onto the haning bracket the yoke/heater assembly.


For all units, assemble the yoke onto the heater body, tightening the clamp bolts finger tight.

 Secure the hanging bracket to the wall with suitable fixings. Ensure the position of this bracket will allow suitable clearances between the heater, when fitted, and adjacent walls, ceilings or objects. See Fig 3.



Mount the yoke/heater assembly to the hanging bracket using the bolt, washer and nut provided.

Finally adjust the direction of the heater to irradiate the desired area and tighten up all clamping nuts and bolts.

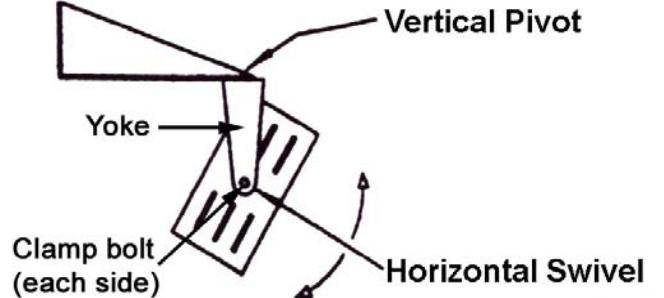

6. ELECTRICAL CONNECTIONS

WARNING: Ensure that the electrical supply is isolated and made safe before making any electrical connections.




WARNING: The Ceramic heater must be connected to a known good earth. The terminal block earth terminal is clearly marked with the standard earth symbol.

WARNING: The 3 and 4.5 kW appliances are supplied with a 1m length of silicone SIHF high temperature cable. If this cable is replaced, then cable of the same specification MUST be used.

WARNING: When the unit is mounted ensure that the cable entry point is in the lowest position; this will assist in keeping the terminals and cable cool.

The heaters should be connected to a 240 Volt single phase supply.

Fig 4 – Circuit Diagrams of Ceramic Heaters

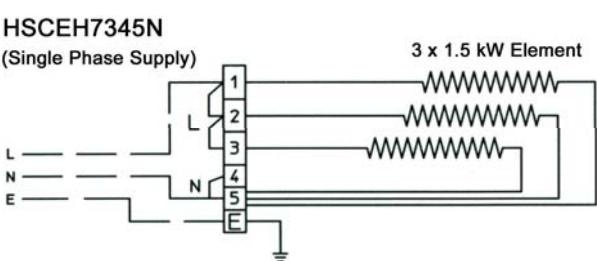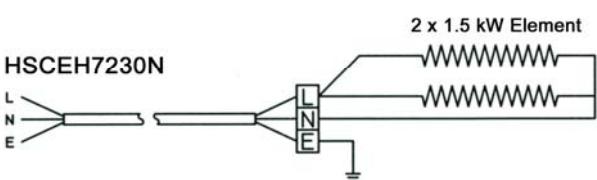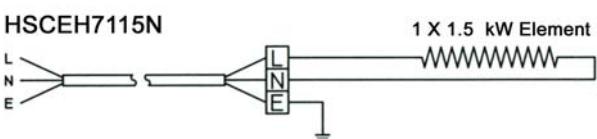

7 CONTROL

In control systems, heaters may be switched on and off, using suitable contractors, linked to the time switches or thermostats. Temperature control using either air thermostats or black bulb thermometers is possible, but the characteristics of radiant heating make it difficult to achieve comfort control without very careful choice of the thermostat and its position. Details of suitable circuits and advice on the correct siting may be obtained from Claudgen.

8. MAINTENANCE

WARNING: Before opening the heater to carry out any maintenance, ensure that the mains supply is switched off and made safe. Also ensure that the unit has cooled and is not too hot to handle.

Because of the high heat output and the open nature of the construction, there is a substantial convected airflow through the unit. Any dust in the atmosphere will also be carried up through the heater and, in due course, deposits of dust may build up within the unit. It is essential that such deposits are removed at regular intervals, otherwise they could become a fire hazard. To maintain the efficiency of the unit, the reflector should be cleaned regularly. Before cleaning ensure the appliance is switched OFF and has cooled down. Cleaning the reflector should require no more than a damp cloth. Avoid using any abrasive cleaners. It should not be necessary to remove the ceramic emitters during cleaning; carefully wipe around them.

9. SPARES

HSC1500CE – Spare Emitter (1.5 kW) suits: HSCEH7115N
HSCEH7230N
HSCEH7345N

In the interest of progress the Company reserves the right to vary specification from time to time without notice. The material listed is offered subject to the Company's General Conditions of Sale, a copy of which may be obtained on request